



## PWCキット-フロアボードウェッジ-GTI、GTI SE、GTR、 WAKE 170 (2020以降)

印刷可能バージョン

この記事の評価する

(平均評価：評価なし)

言語 英語 ▼

プロパティを表示

製品：	Sea-Doo_watercraft
プロジェクト番号：	487803297
インストラクションシートP/N：	487803297
改訂番号：	
改訂日：	
対象アイテム：	フロアボードウェッジ-GTI、GTI SE、GTR、WAKE 170 (2020以降)

このドキュメントでは、次の記号を使用できます。

### ⚠ 警告

回避しないと、死亡または重傷を負う可能性のある危険な状況を示します。

**⚠注意：** 回避しないと、軽傷または中程度の傷害を引き起こす可能性のある危険な状況を示します。

**通知** 従わないと、車両のコンポーネントやその他の資産に重大な損傷を与える可能性のある指示を示します。

### ⚠ 警告

- このキットは、特定の該当するモデル専用設計されています（認定BRPディーラーがモデルを確認します）。販売されたユニット以外のユニットにはお勧めしません。
- 分解/組み立ての際にロック装置（ロックタブ、セルフロックファスナーなど）の取り外しが必要な場合は、必ず新しいものと交換してください。
- トルクレンチの締め付け仕様を厳守する必要があります。
- 電動工具を使用するときは、常に目の保護具と適切な手袋を着用してください。
- 特に指定のない限り、車両で操作を行うときはエンジンをオフにする必要があります。
- ホイール、トランスミッション部品など、動く可能性のある部品に常に注意してください。

### ⚠ 警告

この取扱説明書には、エンドユーザー専用の重要な安全情報や操作説明書が含まれている場合があります。キットの部品番号と、このキットに含まれている取扱説明書を必ずお客様に提供してください。お客様がアクセサリを適切に使用するために必要なすべての情報にアクセスできることを確認します。

**注：** 特に指定がない場合は、次の表の締め付けトルクを使用してください。


	グレード			
	5.8	8.8	10.9	12.9

M4	1.8±0.2N•m (16±2lbf•in)	2.8±0.2N•m (25±2lbf•in)	3.8±0.2N•m (34±2lbf•in)	4.5±0.5N•m (40±4lbf•in)
M5	3.3 ± 0.2 N•m (29 ± 2 lbf•in)	5 ± 0.5 N•m (44 ± 4 lbf•in)	7.8 ± 0.7 N•m (69 ± 6 lbf•in)	9 ± 1 N•m (80 ± 9 lbf•in)
M6	7.5 ± 1 N•m (66 ± 9 lbf•in)	10 ± 2 N•m (89 ± 18 lbf•in)	12.8 ± 2.2 N•m (113 ± 19 lbf•in)	16 ± 2 N•m (142 ± 18 lbf•in)
M8	15.3 ± 1.7 N•m (135 ± 15 lbf•in)	24.5 ± 3.5 N•m (18 ± 3 lbf•ft)	31.5 ± 3.5 N•m (23 ± 3 lbf•ft)	40 ± 5 N•m (30 ± 4 lbf•ft)
M10	29 ± 3 N•m (21 ± 2 lbf•ft)	48 ± 6 N•m (35 ± 4 lbf•ft)	61 ± 9 N•m (45 ± 7 lbf•ft)	73 ± 7 N•m (54 ± 5 lbf•ft)
M12	52 ± 6 N•m (38 ± 4 lbf•ft)	85 ± 10 N•m (63 ± 7 lbf•ft)	105 ± 15 N•m (77 ± 11 lbf•ft)	128 ± 17 N•m (94 ± 13 lbf•ft)
M14	85 ± 10 N•m (63 ± 7 lbf•ft)	135 ± 15 N•m (100 ± 11 lbf•ft)	170 ± 20 N•m (125 ± 15 lbf•ft)	200 ± 25 N•m (148 ± 18 lbf•ft)
M16	126 ± 14 N•m (93 ± 10 lbf•ft)	205 ± 25 N•m (151 ± 18 lbf•ft)	255 ± 30 N•m (188 ± 22 lbf•ft)	305 ± 35 N•m (225 ± 26 lbf•ft)
M18	170 ± 20 N•m (125 ± 15 lbf•ft)	273 ± 32 N•m (201 ± 24 lbf•ft)	330 ± 25 N•m (243 ± 18 lbf•ft)	413 ± 47 N•m (305 ± 35 lbf•ft)

The illustrations in this document show typical construction of the different assemblies and may not reproduce the full detail or exact shape of the parts; however, they represent parts that have the same or similar function.

Installation time is approximately 0.5 hour.

## PARTS TO BE INSTALLED

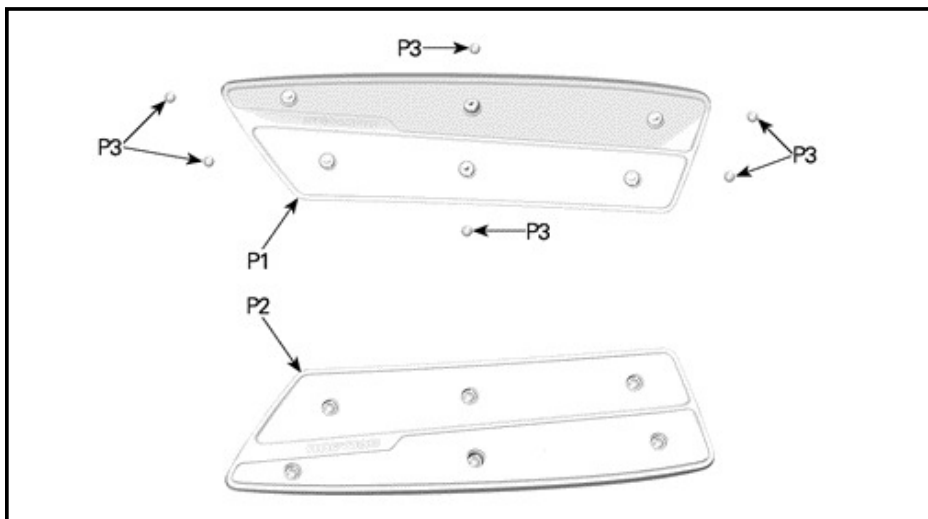


ITEM	DESCRIPTION	Part number	QTY
P1	LH Footrest Assembly	Not available separately	1
P2	RH Footrest Assembly	Not available separately	1
P3	M6.81 X 30 Plastite Torx Screw	250001008	12

## INSTRUCTIONS

# INSTRUCTIONS

## Vehicle Preparation

1. Place both footrests on vehicle deck as per picture below, and adjust footrests for best possible fit with the deck.

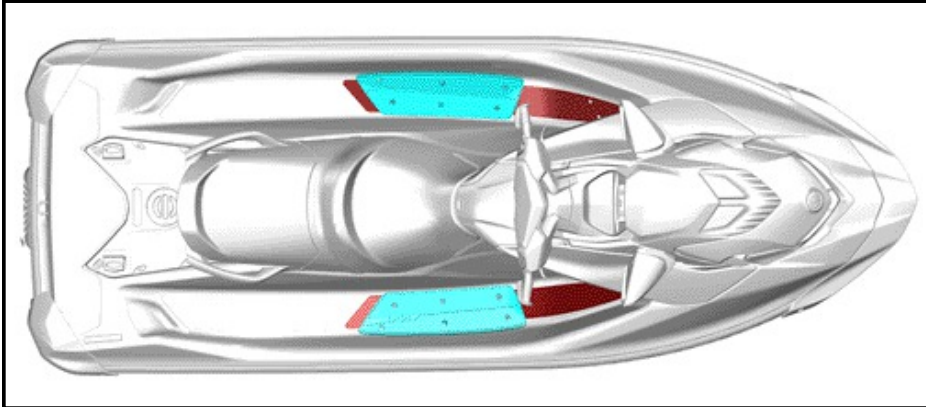


2. Mark both original anti-slip mats as per footrests location with an extra 6 mm (1/4 in) to the back and front section of the footrest length.




3. Remove the marked sections of the anti-slip mats located under the footrest and only clean the 6 mm (1/4 in) front and rear section of any excess glue.

**NOTE:** You may leave any glue residues hidden under the footrests as it will not affect installation.

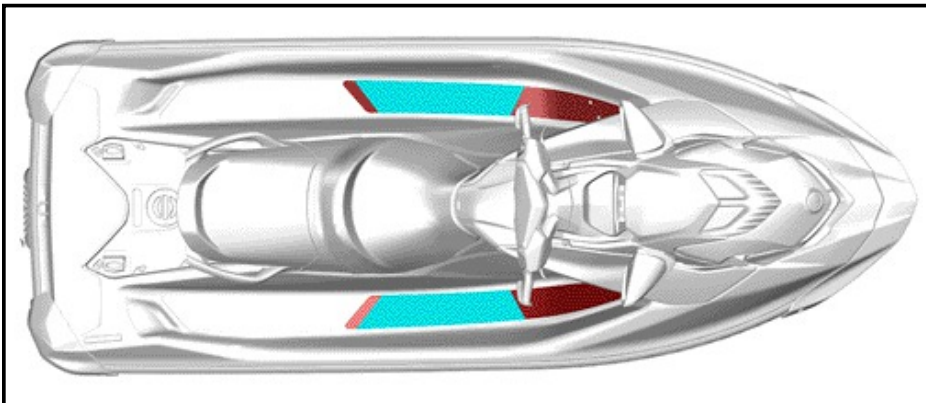

4. Using footrests, make marks on deck and drill marks using a 5.5 mm (7/32 in) drill bit.


**NOTE:** Make sure not to drill no deeper than 8 mm (5/16 in) to prevent any hull damage.

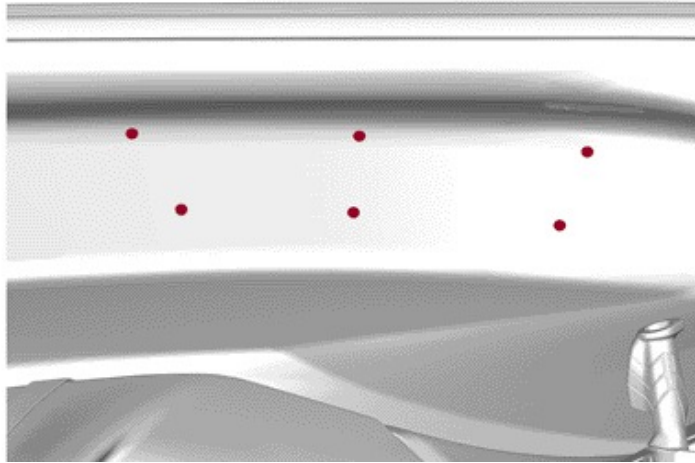

## Part Installation

1. M6.81 X 30 プラスタイトルクスネジ[P3]を使用して、フットレスト[P1]と[P2]の両方を取り付けます。仕様に合わせて締めます。

締め付けトルク	
M6.81 X30 プラスタイトルクスネジ[P3]	4.5±.5N・m (40±4lbf・in)

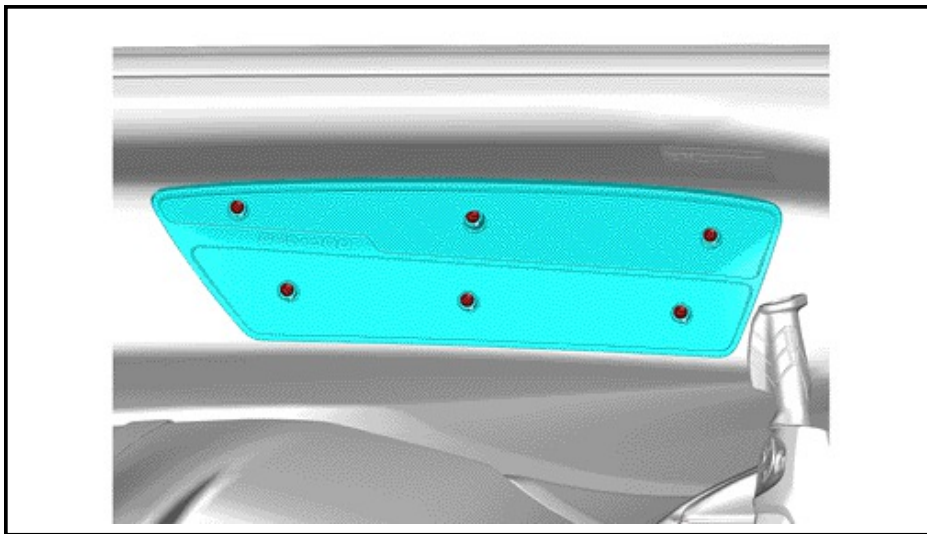

2099-09-14